



www.maxwell.co.th


VUpoint

Bullet 4MP PoE Camera



RISCO 
A LIFETIME OF SECURITY

PoE Camera Dimensions

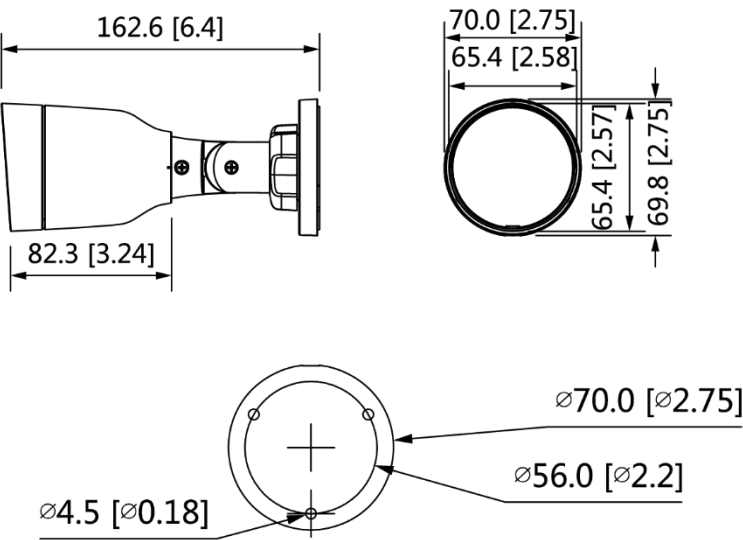

www.maxwell.co.th

PoE Camera Settings

Note

This camera can be connected to RISCO Cloud only via the VUpoint NVR

Step 1

Connect one end of the network cable (LAN) to the camera Ethernet port and the other side to your router or an NVR PoE Port. If the camera is not connected to PoE, power it up by an appropriate power supply.

Step 2

Use the VUpoint NVR instructions to connect the camera to the NVR using “RISCO Pro” Camera type.

Product Specification

Parameter	Description
Image Sensor	1/3” 4Megapixel progressive CMOS
IR Distance	30 m
Focal Length	2.8 mm
WDR	120 dB
Firmware Upgrade	Via the camera’s web interface
Power Supply	12V DC/POE
Power Consumption	<5.0W
Operating Conditions	-40°C to 55°C (-40°F to 131°F)/ less than ≤ 95%
Storage Temperature	-40°C to 60°C (-40°F to 140°F)
Protection	IP67



www.maxwell.co.th