


INTEGRATION **RISCO** – INTRUSION PANELS

The supervision server natively integrates all RISCO control panels

- From “Rokonet” ProSys, RISCO ProSys plus etc. to the last RISCO LightSys Air
- Local P2P encrypted communication
- Bidirectional control and status of zone alarm, zone armed, zone exclusion, partitions, OCs, and other status

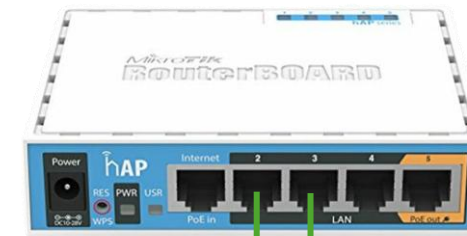

**IP bidirectional
encrypted P2P**



RISCO 



